

**FLUKE**®

**106/107**

Digital Multimeters  
Safety Information



**2-Year Limited Warranty.**  
**See the Users Manual for the full warranty.**

The Fluke 106 and 107 Multimeters (the Product) are 6000-count instruments.

Fluke Corporation operates worldwide. For local contact information, go to our website: [www.fluke.com](http://www.fluke.com).

To register your product, or to view, print, or download the latest manual or manual supplement, go to our website: [www.fluke.com/productinfo](http://www.fluke.com/productinfo).

---

PN 4343883 (English)

6/2013, Rev. 4, 8/2025

©2025 Fluke Corporation. All rights reserved. Specifications are subject to change without notice. All Product names are trademarks of their respective companies.

Fluke Corporation  
6920 Seaway Blvd.  
Everett WA 98203  
U.S.A.

Fluke Europe B.V.  
P.O. Box 1186  
5602 BD Eindhoven  
The Netherlands

+1-425-446-5500 [fluke-info@fluke.com](mailto:fluke-info@fluke.com)

## Safety Information

A **Warning** identifies hazardous conditions and procedures that are dangerous to the user.



**To prevent possible electrical shock, fire, or personal injury:**















- **Carefully read all instructions.**
- **Read all safety information before you use the Product.**
- **Use the Product only as specified, or the protection supplied by the Product can be compromised.**
- **Do not use the Product around explosive gas, vapor, or in damp or wet environments.**
- **Do not use the Product if it is damaged.**
- **Disable the Product if it is damaged.**
- **Do not use the Product if it operates incorrectly.**
- **Examine the case before you use the Product. Look for cracks or missing plastic. Carefully look at the insulation around the terminals.**
- **Use only correct measurement category (CAT), voltage, and amperage rated probes, test leads, and adapters for the measurement.**
- **Measure a known voltage first to make sure that the Product operates correctly.**
- **Do not use test leads if they are damaged. Examine the test leads for damaged insulation and measure a known voltage.**
- **Do not apply more than the rated voltage, between the terminals or between each terminal and earth ground.**

- Do not use the HOLD function to measure unknown potentials. When HOLD is turned on, the display does not change when a different potential is measured.
- Do not touch voltages >30 V ac rms, 42 V ac peak, or 60 V dc.
- Keep fingers behind the finger guards on the probes.
- Remove all probes, test leads, and accessories before the battery door is opened.
- Do not exceed the Measurement Category (CAT) rating of the lowest rated individual component of a Product, probe, or accessory.
- Remove the input signals before you clean the Product.
- Have an approved technician repair the Product.
- Remove the batteries if the Product is not used for an extended period of time, or if stored in temperatures above 50 °C. If the batteries are not removed, battery leakage can damage the Product.
- Replace the batteries when the low battery indicator shows to prevent incorrect measurements.
- Use only specified replacement parts.
- Use only specified replacement fuses.
- Limit operation to the specified measurement category, voltage, or amperage ratings.
- Do not use in CAT III or CAT IV environments without the protective cap installed. The protective cap decreases the exposed probe metal to <4 mm. This decreases the possibility of arc flash from short circuits.
- Remove circuit power before you connect the Product in the circuit when you measure current. Connect the Product in series with the circuit.
- For safe operation and maintenance of the product, repair the Product before use if the batteries leak.

## Symbols

The table below lists the symbols that can be used on the Product or in this document.

**Table 1. Symbols**

	Consult user documentation.		AC (Alternating Current)
	WARNING. RISK OF DANGER.		DC (Direct Current)
	WARNING. HAZARDOUS VOLTAGE. Risk of electric shock.		Both direct and alternating current
	Static awareness. Static discharge can damage part(s).		Earth
	Battery		Capacitance
	Diode		Fuse
<b>CAT II</b>	Measurement Category II is applicable to test and measuring circuits connected directly to utilization points (socket outlets and similar points) of the low-voltage MAINS installation.		
<b>CAT III</b>	Measurement Category III is applicable to test and measuring circuits connected to the distribution part of the building's low-voltage MAINS installation.		
<b>CAT IV</b>	Measurement Category IV is applicable to test and measuring circuits connected at the source of the building's low-voltage MAINS installation.		
	Conforms to European Union directives.		
	This product complies with the WEEE Directive and its marking requirements. The affixed label indicates that you must not discard this electrical/electronic product in domestic household waste. Do not dispose of this product as unsorted municipal waste. For information about take-back and recycling programs available in your country, see the <a href="#">Fluke website</a> .		

## Specifications

<b>Maximum voltage between any Terminal and Earth Ground</b>	600 V
<b>Fuse protection for A input</b>	11 A, 1000 V, IR 17 kA
<b>Display (LCD)</b>	6000 counts, updates 3/sec
<b>Size</b>	142 mm x 69 mm x 28 mm
<b>Weight</b>	200 g
<b>Battery</b>	2 AAA, NEDA 24A, IEC LR03
<b>Temperature</b>	
Operating	0 °C to 40 °C
Storage	-30 °C to 60 °C
<b>Relative humidity</b>	
Operating Humidity	Non-condensing when <10 °C; ≤90 % at 10 °C to 30 °C; ≤75 % at 30 °C to 40 °C
Operating Humidity, 40 MΩ Range	≤80 % at 10 °C to 30 °C; ≤70 % at 30 °C to 40 °C
<b>Altitude</b>	
Operating	2000 m
Storage	12 000 m
<b>Temperature Coefficient</b>	0.1 X (specified accuracy) / °C (<18 °C or >28 °C)
<b>IP Rating</b>	IEC 60529: IP 40

<b>Safety</b>	
General	IEC 61010-1: Pollution Degree 2
Measurement	IEC 61010-2-033: CAT III 600V
<b>Electromagnetic Compatibility (EMC)</b>	
International	IEC 61326-1: Portable, IEC 61326-2-2 CISPR 11: Group 1, Class A
	<i>Group 1: Equipment has intentionally generated and/or uses conductively-coupled radio frequency energy that is necessary for the internal function of the equipment itself.</i>
	<i>Class A: Equipment is suitable for use in all establishments other than domestic and those directly connected to a low-voltage power supply network that supplies buildings used for domestic purposes. There may be potential difficulties in ensuring electromagnetic compatibility in other environments due to conducted and radiated disturbances.</i>
	<i>Emissions that exceed the levels required by CISPR 11 can occur when the equipment is connected to a test object. The equipment may not meet the immunity requirements of this standard when test leads and/or test probes are connected.</i>
Korea (KCC)	Class A Equipment (Industrial Broadcasting & Communication Equipment)
	<i>Class A: Equipment meets requirements for industrial electromagnetic wave equipment and the seller or user should take notice of it. This equipment is intended for use in business environments and not to be used in homes.</i>
USA (FCC)	47 CFR 15 subpart B. This product is considered an exempt device per clause 15.103.